



1. **MEMORY:** The rubber cover, located on top of the camera, is where the COMPACT FLASH card is installed for data storage (required for saving).
2. **POWER:** Insert the BATTERY into the slot on the bottom of the camera.
3. **START:** To turn the camera on, press the ON/OFF switch, located on the left side of the camera, adjacent to the LCD display.



The button should light up (green) and the start-up screen for the Flexcam will appear.



4. **AUTO ADJUST:** Once the camera has completed start-up, press the Auto-Adjust button.
 - This will automatically set the camera's LEVEL and SPAN.
5. **FOCUS:** Once adjusted, use the MANUAL FOCUS (rotate lens) to bring the target into view.
 - Press the Auto-Adjust button once more to further clarify the image.

Focus by turning lens



6. **PAUSE IMAGE:** To capture an image, press the trigger button on the front of the camera once. This will pause the image.
 - Hold the button down and it will capture the paused picture, saving it to disk.

QuickStart: Flexcam

- 7. MANUAL ADJUST (Span and Level):** To manually adjust the image's SPAN, use the joystick to move the cursor over either the high or low number on the temperature scale.

For Flexcam S-Series cameras, these are arrows that appear as pairs at either end of the scale).



- Press enter.
- A box should appear around the number
- Use the joystick control to raise or lower the temperature until a desired SPAN is reached.



- To manually adjust the image's LEVEL, select the number in the center of the temperature scale and repeat as indicated above.
- This procedure can be done live or when an image is paused, on either the Flexcam or Flexcam T-Series units.
- It is only available in live mode on the S-Series.

- 8. PALETTE:** To change the color palette for any camera, simply mouse-over the color bar and, using the enter button, click through a series of pre-set palettes.

