

QuickStart: FLIR EX320

1. **POWER:** Remove cover to battery compartment, insert battery and replace cover.
2. **START:** Press the ON button briefly and wait approximately 30 seconds for the camera to power up and become ready for use. Be sure to remove the lens cap.
3. **FOCUS:** Focus by turning the focus (outer) ring on the lens. DO NOT turn the small ring closest to the camera as this will cause the lens to loosen and fall off.
4. **AUTO ADJUST:** If the word MANUAL is displayed on the screen in the upper left corner (just below the FLIR logo), press the MENU button once. When the menu is displayed on the screen, press the DOWN arrow on the joystick once until the word AUTOMATIC is highlighted. Press the MENU button again and the camera will be in the AUTOMATIC ADJUST mode.



5. **MANUAL ADJUST:** To manually adjust LEVEL and SPAN, press the MENU button and from the menu select MANUAL. Press MENU again and the camera will be in the manual adjust mode.
 - Use the UP and DOWN arrows of the joystick to adjust LEVEL and the LEFT and RIGHT arrows to adjust SPAN.

The best way to set up the EX320 is to have the MANUAL ADJUST enabled at all times.

- Use the trigger to activate AUTO ADJUST when you need it.
- To enable the trigger to AUTO, press MENU and scroll down to SETUP.
- Press the right ARROW to open the submenu, highlight SETTING, press SELECT, scroll down to TRIGGER SETTINGS and highlight AUTO ADJUST.



6. **PAUSE IMAGE:** When the image is in focus and ready to be captured, gently press the FREEZE/STORE button to freeze the image.
7. **SAVE IMAGE:** If the image is acceptable, hold the same button down and the image will be stored to the flash memory.
8. **RECALL IMAGE:** To recall the image, press the MENU button.
 - Use the DOWN arrow on the joystick to select the FILE function.
 - Use the RIGHT arrow to select the submenu and from that, select IMAGES.
 - Push the MENU button and thumbnails of all stored images will be displayed.
 - Highlight any image and press SELECT to open it.

