

QuickStart: Wahl HSI13000




1. MEMORY:

- Insert the SD memory card in the slot under the bay cover on the right side of the camera.

2. POWER:

- Check that the battery is installed and fully charged. Battery is installed in the battery bay in the right side of the handle.
- Power can also be supplied by the included AC adapter.

3. START:

- Remove the *Lens Cap* and press and hold the *Power*  button for 2 seconds.

4. FOCUS:

- Manual Focus: Twist the *Focusing Ring* clockwise or counterclockwise.

5. AUTO ADJUST (Level & Span):

- Auto adjust is the default mode when started ("AUTO" will be indicated below the *Palette Scale*). From manual mode press the "Auto" Hotkey.

6. MANUAL ADJUST (Level & Span):

- From auto mode, press the "MAN" Hotkey, use this Hotkey to toggle between the two modes.
 - While in manual mode (indicated by "MAN" below the *Palette Scale*), now press the L-S/SP Hotkey to switch to level/span adjustment (indicated by "L-S" at the bottom of the LCD).
 - Press the Directional up and down buttons to adjust level and left and right adjusts Span.

7. FREEZE IMAGE:

- Press the Freeze Hotkey to freeze or pause the image. Press the Back Hotkey to return to a live image

8. SAVE IMAGE:

- After freezing and image as above, press the Save Hotkey to store the image and return to live image.